

Quick Start Guide

Anweisungen auf Deutsch finden Sie auf der anderen Seite



Warning! You must read the regular user manual as it contains critical safety information!

NOTE: This guide is a condensed extract missing vital information. The full user manual and other useful information can be found here: manuals.podbike.com

Opening canopy from the inside

Pull the top of lock rope forward to unlock both sides, then push the canopy up.

Opening canopy using flat strap


If the flat black strap is available from the outside, the canopy can be unlocked by pulling the strap, unlocking the doors. Then the canopy can be lifted up and backwards.

Opening canopy when fully locked

To get into the velomobile, unlock the tailgate with the key. Keys are taped to the outside of the tailgate on new FRIKARs. The canopy can then be opened by grasping the lock rope under the canopy and pull it forward to release the locking mechanism on both sides of the canopy. While keeping the locks open, lift the canopy.

Change seat to pedal distance


The main adjustment of distance between the seat and

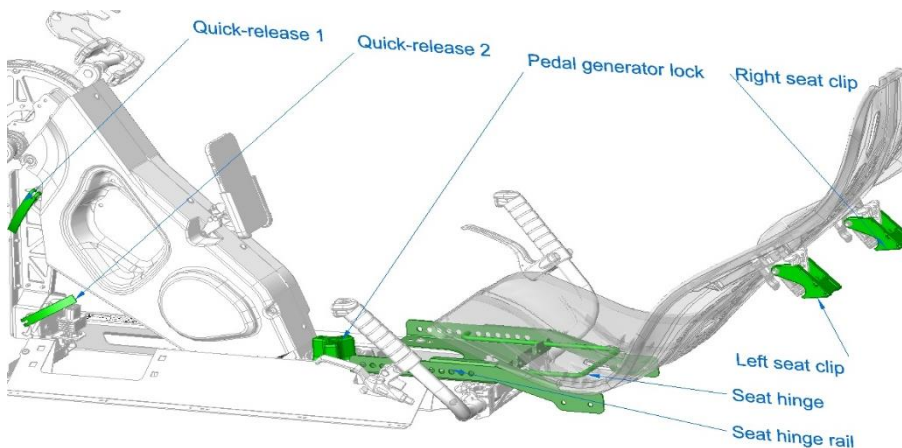

pedals is done by moving the pedals. You need to unlock the Pedal Generator Lock and the two quick releases to adjust this.

Installing and removing battery

- Open the two *seat clips* and tilt the seat forward. Slide the battery under the perforated *battery locking clamp*.
- Make sure the battery goes all the way in and then push the perforated *battery locking clamp* over the battery to lock it in place:

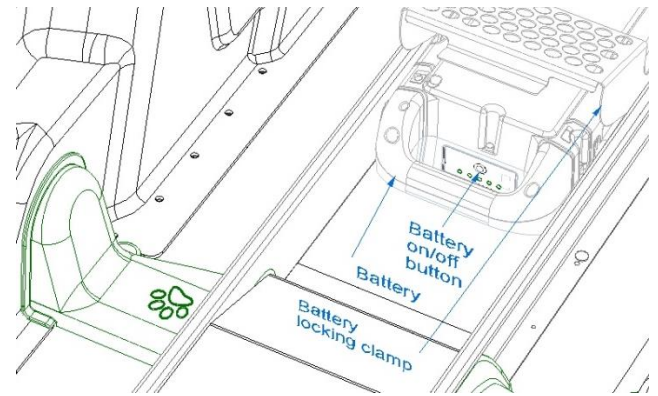


Using the control handles

The vehicle has two identical control handles located at left and right end of handlebar. Each control handle has two switches and a joystick.

Functions on left control handle:

- Rear switch: unused
- Front switch: High beam/low beam
- Joystick left and right: Activate turn indicator
- Joystick up and down: Blower
- Joystick push down: Deactivate turn indicator

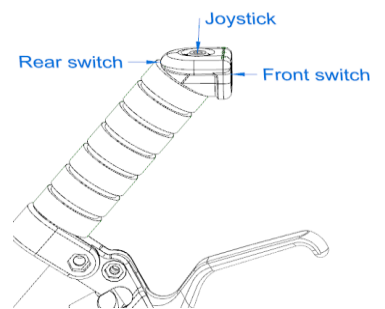

Functions on right control handle

- Rear switch: Activate washer pump
 - Front switch (bike off): Start Bluetooth
 - Front switch (bike on): Bicycle bell
 - Joystick left and right: Assistance level
 - Joystick up and down: Cadence

Turning FRIKAR on

1. Charge and install traction battery
2. Push battery button to wake it up
3. Press *right control handle: front switch*
4. Wait two seconds
5. Press and hold *right control handle: top button* (keep pressed down for 4 seconds)
6. The control handles lights up and bike beeps. Wait about a second before starting

to pedal.

Turning FRIKAR off

Press *right control handle: top button* (keep pressed for 4 seconds). External lights and the red light in handles will then turn off.

! Always turn off the vehicle before removing the traction battery